


Sign Holder Stand

Install instruction

Spare Parts

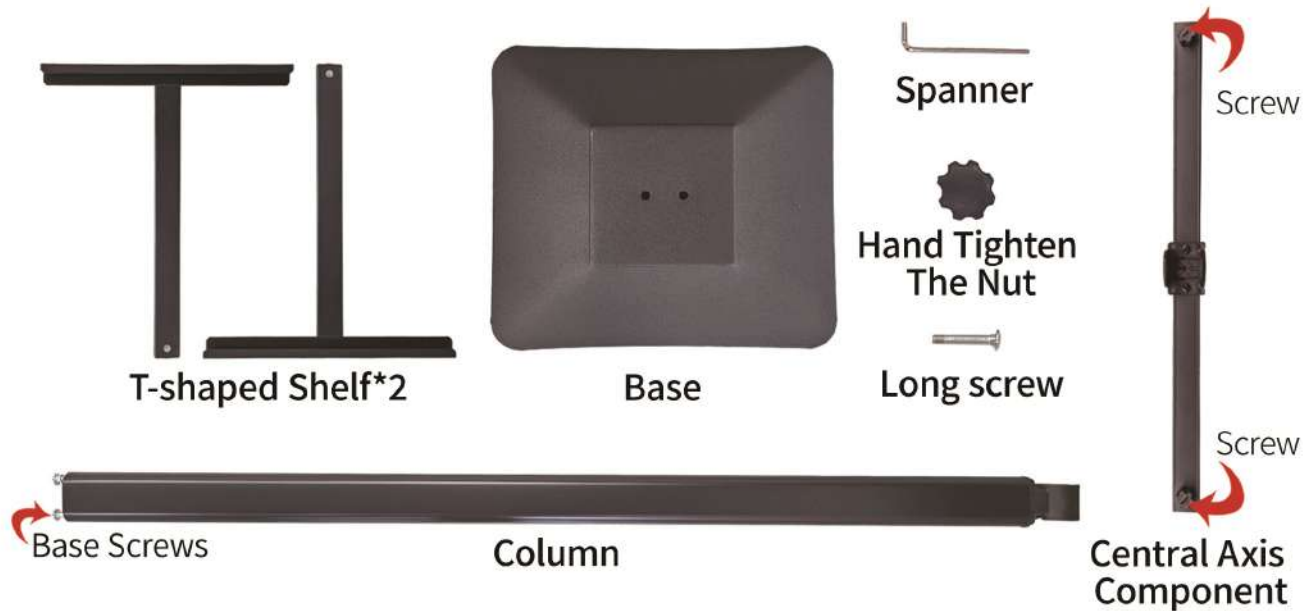

1




Take off the screws on the base of the column and secure it to the base.

2



The central axis component is installed on the column, and the adjusting component is threaded through with a long screw. The screw nut is tightened by hand.

3

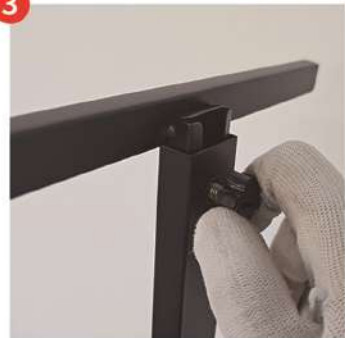

Insert the T-shaped bracket into the central axis and tighten the hand screws.

4



installation is complete (Back display)

*This product does not include KT board and cannot be transported